

# **TURBONutter**

Lada Niva 4x4  
Service Manual  
Fuel Injection

This manual and a host of other wonderful Lada Niva documentation is available free of charge at:

<http://www.turbo-nutter.com>

You can do anything you like with this manual except sell it or otherwise make money from it.

While I can't stop you sticking it on your own website I would much prefer you linked to its original location on turbo-nutter.com

You use the information contained with this manual at you own risk. If you're not sure how to do something either don't do it or ask someone who knows about such things. The font of all Lada knowledge can be found at:

<http://www.lada.co.uk/forum>


For Lada parts, advice and general all round Lada wonderfulness these blokes aren't bad:

Lada UK Ltd  
Askew Rigg  
Troutbeck  
Penrith, Cumbria  
CA11 0SZ  
United Kingdom

T: +44 (0) 17 6877 9794  
F: +44 (0) 17 6877 9197  
E: [alan@lada.co.uk](mailto:alan@lada.co.uk)  
W: <http://www.lada.co.uk>

Lada Parts Australia P/L  
42 Aerodrome Road  
Caboolture  
Queensland  
4510  
Australia

T: +61 7 5495 5100  
F: +61 7 5495 5152  
E: [andy@ladaparts.com](mailto:andy@ladaparts.com)  
W: <http://www.ladaparts.com>

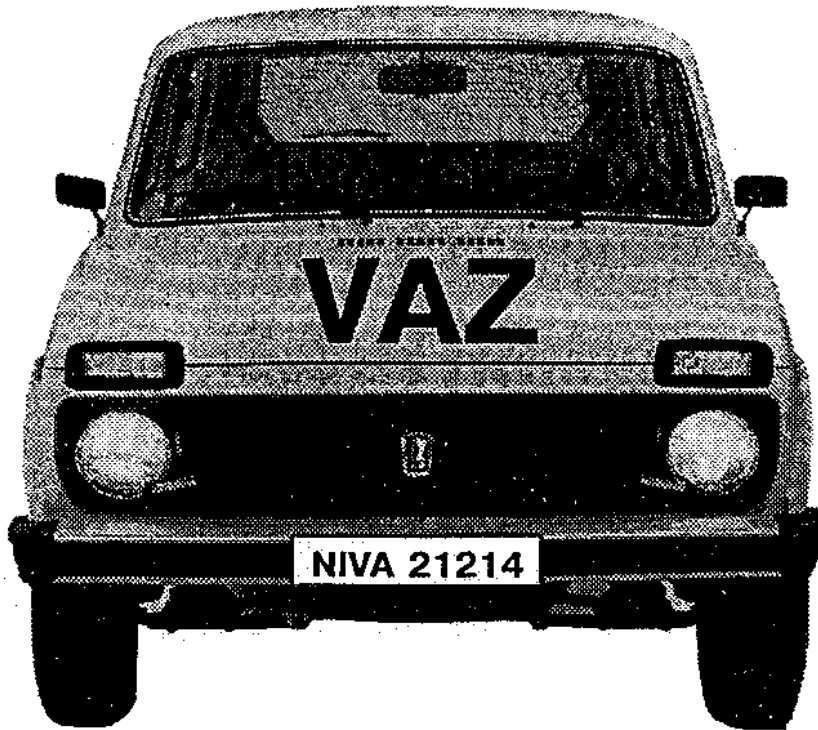

**SERVICE MANUAL  
FUEL INJECTION  
NIVA 4 X 4**

**PLEASE NOTE**

Throughout this book, reference is frequently made to the use of a "TECH I SCAN" tool as a diagnostic aid. Wherever this requirement occurs you should instead use the "LADASCAN" and its related test equipment as supplied in your dealer toolkit.

**AAA-973**

**August 1995**

*Handwritten notes:*  
280  
1000  
1000  
1000  
1000

# ENGINE MANAGEMENT SYSTEMS

## 1.7L THROTTLE BODY INJECTION

### TABLE OF CONTENTS

Ref. Subject	Page	Ref. Subject	Page
1 GENERAL DESCRIPTION AND SYSTEM OPERATION.....	1-1	Starting Mode.....	1-29
GLOSSARY OF TERMS.....	1-4	Clear Flood Mode.....	1-29
1.1 ELECTRONIC CONTROL MODULE AND SENSORS.....	1-8	Run Open Loop Mode.....	1-29
Electronic Control Module.....	1-8	Run Closed Loop Mode.....	1-29
Electronic Control Module Function.....	1-8	Acceleration Enrichment Mode.....	1-29
Engine Calibrator.....	1-9	Power Enrichment Mode.....	1-29
Memory.....	1-9	Deceleration Enleanment.....	1-30
Read Only Memory.....	1-9	Decel Fuel Cut Mode.....	1-30
Random Access Memory.....	1-9	Battery Voltage Correction Mode.....	1-30
Programmable Read Only Memory.....	1-9	Fuel Cutoff Mode.....	1-30
Information Sensors.....	1-10	Adaptive Adjustment Fuel Injector Pulswidth.....	1-31
Coolant Temperature Sensor.....	1-10	Closed Loop Fuel Adjustment.....	1-31
Intake Air Temperature Sensor.....	1-11	Memory Fuel Adjustment.....	1-32
Manifold Absolute Pressure Sensor.....	1-12	Memory Fuel Adjustment Cell.....	1-33
Throttle Position Sensor.....	1-14	1.3 EVAPORATIVE EMISSION CONTROL SYSTEM.....	1-35
Oxygen Sensor (Electrically Heated).....	1-15	General Description.....	1-35
Crankshaft Position Reference Signal.....	1-18	Purpose.....	1-35
Vehicle Speed Sensor.....	1-18	Evaporative System.....	1-35
Octane Adjustment.....	1-19	Operation.....	1-35
Air Conditioning Request Signal.....	1-19	Results of Incorrect Operation.....	1-35
1.2 FUEL CONTROL SYSTEM.....	1-20	Visual Check of Canister.....	1-35
General Description.....	1-20	1.4 DIRECT IGNITION SYSTEM.....	1-37
Components.....	1-20	General Description.....	1-37
Fuel Pump.....	1-21	Electronic Spark Timing.....	1-37
Fuel Filter.....	1-21	System Components.....	1-38
Fuel System Electrical Circuits.....	1-21	Diagnosis.....	1-39
Throttle Body Injection Unit.....	1-22	Symptom Diagnosis.....	1-39
Fuel Pressure Diagnostic Fitting.....	1-22	1.9 ELECTRONIC CONTROL MODULE CONTROLLED INTAKE MANIFOLD ELECTRIC HEATER.....	1-41
Fuel Injector.....	1-23	General Description.....	1-41
Fuel Pressure Regulator.....	1-23	Operation.....	1-41
Fuel Metering.....	1-24	1.10 ELECTRONIC CONTROL MODULE CONTROLLED AIR CONDITIONING.....	1-42
Throttle Position Sensor.....	1-24	General Description.....	1-42
Idle Air Control Valve.....	1-25		
Speed-Density Fuel Control.....	1-26		
Speed-Density Calculation.....	1-27		
Modes of Fuel Control Operation.....	1-28		

## 2 - ENGINE MANAGEMENT SYSTEMS 1.7L THROTTLE BODY INJECTION

Ref. Subject	Page	Ref. Subject	Page
1.13 CRANKCASE VENTILATION SYSTEM .....	1-43	Throttle Position .....	2-11
General Description .....	1-43	Throttle Angle .....	2-11
Results of Incorrect Operation .....	1-43	Manifold Absolute Pressure .....	2-11
1.14 THERMOSTATIC AIR CLEANER .....	1-44	Barometric Pressure .....	2-11
General Description .....	1-44	Oxygen Sensor Voltage .....	2-11
Purpose .....	1-44	Exhaust Gases (Rich/Lean) .....	2-11
Operation .....	1-44	Oxygen Sensor Ready (Yes/No) .....	2-11
Results of Incorrect Operation .....	1-44	“Open/Closed Loop” Fuel Control .....	2-11
Thermostatic Air Cleaner Functional Check .....	1-44	“Closed Loop” Fuel Adjustment .....	2-12
2 DIAGNOSIS .....	2-1	Memory Fuel Adjustment .....	2-12
Introduction .....	2-1	Memory Fuel Adjustment Cell .....	2-12
Diagnosis Procedure .....	2-2	Air Fuel Ratio .....	2-12
2.1 DIAGNOSTIC PRECAUTIONS .....	2-3	Power Enrichment Mode Active? (Yes/No) .....	2-12
2.2 DIAGNOSTIC GENERAL DESCRIPTION .....	2-4	Decel Fuel Cut Mode in Effect? (Yes/No) .....	2-12
“Check Engine” Light .....	2-4	Evaporative Emission Canister	
Intermittent “Check Engine” Light .....	2-4	Purge Duty Cycle .....	2-12
Reading Codes .....	2-5	Fuel Injector Pulse Width .....	2-12
Clearing Codes .....	2-5	Spark Advance .....	2-12
Diagnostic Display Mode .....	2-5	Octane Adjust .....	2-12
Field Service Mode .....	2-6	Idle Air Control Position (0-255) .....	2-12
Electronic Control Module		Vehicle Speed .....	2-12
Adaptive Learning Ability .....	2-6	Radiator Fan .....	2-12
Diagnosis Procedure .....	2-7	Intake Manifold Heater (“ON/OFF”) Clutch .....	2-12
Diagnostic Circuit Check .....	2-7	System Voltage .....	2-12
2.3 TECH 1 “SCAN” TOOL DESCRIPTION .....	2-8	Air Conditioning Request (Yes/No) .....	2-13
Tech 1 “Scan” Tool .....	2-8	Air Conditioning (“ON/OFF”) Clutch .....	2-13
Tech 1 “Scan” Tool Explanation .....	2-8	Fuel Pump Circuit (“ON/OFF”) .....	2-13
Tech 1 “Scan” Tool Uses .....	2-8	Calibration Identification .....	2-13
Tech 1 “Scan” Tool Use With Intermittents .....	2-8	Time From Start .....	2-13
Additional Tech 1 Functions .....	2-8	2.4 UNDERHOOD LOCATION VIEWS .....	2-14
Tech 1 “Scan” Tool Limitations .....	2-9	2.5 FUSE BLOCK VIEWS .....	2-15
Diagnostic Modes .....	2-10	2.6 RELAY CALLOUT AND LOCATION VIEW .....	2-16
Diagnostic Display Mode .....	2-10	ENGINE MANAGEMENT SYSTEMS	
Field Service Mode .....	2-10	WIRING DIAGRAMS .....	2-17
Tech 1 “F0: Data List” Parameters .....	2-10	2.7 ELECTRONIC CONTROL MODULE CONNECTOR	
Tech 1 “F0: Data List” .....	2-10	IDENTIFICATION CHARTS .....	2-22
Engine Speed .....	2-10	2.8 ELECTRONIC CONTROL MODULE	
Desired Idle .....	2-11	TERMINALS DEFINED .....	2-24
Coolant Temperature .....	2-11	Electronic Control Module Connector	
Intake Air Temperature .....	2-11	Voltages With Explanations .....	2-24

## ENGINE MANAGEMENT SYSTEMS 1.7L THROTTLE BODY INJECTION - 3

Ref. Subject	Page	Ref. Subject	Page
<b>2.9A DIAGNOSTIC CHARTS</b> .....	2-29	<b>2.9B SYMPTOM CHARTS</b> .....	2-95
Diagnostic Charts Defined .....	2-30	Important Preliminary Checks .....	2-96
Tech 1 "Scan" Tool Typical Data Value .....	2-32	Before Starting .....	2-96
Tech 1 "Scan" Data .....	2-33	Intermittents .....	2-97
Electronic Control Module Diagnostic Codes .....	2-35	Hard Start .....	2-99
Chart A - Diagnostic Circuit Check .....	2-36	Surges and/or Chuggles .....	2-101
Chart A-1 - No "Check Engine" Light .....	2-38	Lack of Power, Sluggish, or Spongy .....	2-102
Chart A-2 - No Assembly Line Data Link Serial Data Or Will Not Flash Code 12 ( "Check Engine" Light "ON" Steady) .....	2-40	Detonation/Spark Knock .....	2-104
Chart A-3 - Engine Cranks But Will Not Run .....	2-42	Hesitation, Sag, Stumble .....	2-106
Chart A-4 - Ignition Relay and Power Circuits Check .....	2-48	Cuts Out, Misses .....	2-107
Chart A-5 - Fuel System Electrical Circuit Check .....	2-52	Poor Fuel Economy .....	2-108
Chart A-7 - Fuel System Diagnosis .....	2-54	Stalling, Rough, Unstable or Incorrect Idle .....	2-109
Code 13 - No Oxygen Sensor Signal .....	2-58	Excessive Exhaust Emissions or Odors .....	2-111
Code 14 - Coolant Temperature Sensor (Signal Voltage Too Low) .....	2-60	Dieseling, Run-On .....	2-112
Code 15 - Coolant Temperature Sensor (Signal Voltage Too High) .....	2-62	Backfire .....	2-113
Code 21 - Throttle Position (Signal Voltage Too High) .....	2-64	Chart B-1 Restricted Exhaust System Check .....	2-114
Code 22 - Throttle Position (Signal Voltage Too Low) .....	2-66	Electronic Control Module Pin Connector "A" Symptom Chart .....	2-115
Code 23 - Intake Air Temperature (Signal Voltage Too High) .....	2-68	Electronic Control Module Pin Connector "B" Symptom Chart .....	2-116
Code 24 - No Vehicle Speed Signal .....	2-70	Electronic Control Module Pin Connector "C" Symptom Chart .....	2-117
Code 25 - Intake Air Temperature (Signal Voltage Too Low) .....	2-72	Electronic Control Module Pin Connector "D" Symptom Chart .....	2-118
Code 33 - Manifold Absolute Pressure (Signal Voltage Too High) .....	2-74	<b>2.9C COMPONENT SYSTEM CHARTS</b> .....	2-119
Code 34 - Manifold Absolute Pressure (Signal Voltage Too Low) .....	2-76	Chart C-1D Manifold Absolute Pressure Output Check .....	2-120
Code 35 - Idle Speed Error .....	2-78	Chart C-1H Throttle Position Sensor Output Check .....	2-122
Code 42 - Electronic Spark Timing Control Circuit Problem .....	2-80	Chart C-2C Idle Air Control Circuit Check .....	2-124
Code 44 - Lean Exhaust Indication .....	2-82	Chart C-3 Canister Purge Valve Check .....	2-126
Code 45 - Rich Exhaust Indication .....	2-84	Chart C-4 Ignition System Check (No Spark) (1 of 2) .....	2-128
Code 51 - Calibrator Error .....	2-86	Chart C-4B Direct Ignition System Misfire <u>At Idle</u> .....	2-132
Code 53 - System Voltage Too High .....	2-88	Chart C-4C Direct Ignition System Misfire <u>Under Load</u> .....	2-136
Code 54 - Octane Adjustment (Signal Voltage Too High or Too Low) .....	2-90	Chart C-9 Intake Manifold Electric Heater .....	2-138
Code 55 - Electronic Control Module Error .....	2-94	Chart C-10 Air Conditioning Compressor Clutch Control .....	2-142
		Chart C-13 Crankcase Ventilation System Check .....	2-144
		Chart C-15 Octane Adjustment Potentiometer Check .....	2-146

## 4 - ENGINE MANAGEMENT SYSTEMS 1.7L THROTTLE BODY INJECTION

Ref.	Subject	Page	Ref.	Subject	Page
3	<b>SERVICE OPERATIONS</b> .....	3-1	3.2	<b>FUEL CONTROL SYSTEM</b> .....	3-26
	Service Precautions.....	3-1		Fuel Control.....	3-26
	Driveability and Emissions Control.....	3-1		On-Vehicle Service.....	3-26
	Maintenance Schedule.....	3-1		General Service Information.....	3-26
	Blocking Drive Wheels.....	3-1		Service Identification.....	3-27
	What This Section Contains.....	3-1		Fuel Pressure Relief Procedure.....	3-28
	Visual/Physical Underhood Inspection.....	3-1		Fuel System Pressure Test.....	3-28
	Service Precautions.....	3-1		Throttle Body Injection Unit.....	3-30
	Electrostatic Discharge Damage.....	3-2		Fuel Injector Assembly.....	3-33
	Repair Procedures.....	3-2		Pressure Regulator Assembly.....	3-34
	Electrical Repairs.....	3-2		Fuel Meter Assembly.....	3-35
	Circuit Protection.....	3-3		Throttle Position Sensor.....	3-36
	Circuit Protection Devices.....	3-3		Idle Air Control Valve.....	3-36
	Fuses.....	3-3		Tube Module Assembly.....	3-37
	Typical Electrical Repairs.....	3-5		Throttle Body Assembly.....	3-37
	Short Circuits Caused by Damaged Wire- Insulation.....	3-5		Fuel Pump.....	3-38
	Replacing Terminals on Unsealed Components.....	3-5		Fuel Pump Electrical Circuit.....	3-39
	Replacing Pigtails on Sealed Components.....	3-5		Fuel System Relay.....	3-39
	Replacing Connector Housings On Unsealed Components.....	3-6		Fuel Filter.....	3-40
	Splicing Copper Wire Using Splice Clips, Shrink Tube and Hot Melt.....	3-8	3.3	<b>EVAPORATIVE EMISSION CONTROL SYSTEM</b> .....	3-41
	Splicing Twisted/Shielded Cable.....	3-10		On-Vehicle Service.....	3-41
	Repairing Connectors.....	3-11		Visual Check of Canister.....	3-41
	Push-To-Seat and Pull-To-Seat.....	3-11		Fuel Vapor Canister.....	3-41
	Weather Pack.....	3-12		Fuel Vapor Canister Hoses.....	3-41
	Terminal Repair.....	3-12	3.4	<b>DIRECT IGNITION SYSTEM</b> .....	3-43
	Wiring Connector Service.....	3-13		On-Vehicle Service.....	3-43
	Tools Needed to Service the System.....	3-14		Direct Ignition System Assembly.....	3-43
	Wiring Harness Service.....	3-15		Ignition Coil.....	3-43
	Checking Terminal Contact.....	3-15		Ignition Module.....	3-43
				Crankshaft Sensor.....	3-44
3.1	<b>ELECTRONIC CONTROL MODULE AND SENSORS</b> .....	3-18	3.9	<b>INTAKE MANIFOLD HEATER</b> .....	3-45
	Electronic Control Module.....	3-18		On-Vehicle Service.....	3-45
	Engine Calibrator.....	3-20	4	<b>SPECIFICATIONS</b> .....	4-1
	Functional Check.....	3-20		1.7L Throttle Body Injection.....	4-1
	Coolant Temperature Sensor.....	3-21	5	<b>TORQUE SPECIFICATIONS</b> .....	5-1
	Octane Adjustment Potentiometer.....	3-22		1.7L Throttle Body Injection.....	5-1
	Manifold Absolute Pressure Sensor.....	3-22	6	<b>SPECIAL TOOLS</b> .....	6-1
	Throttle Position Sensor.....	3-23		1.7L Throttle Body Injection.....	6-1
	Vehicle Speed Sensor.....	3-23			
	Oxygen Sensor.....	3-24			
	Intake Air Temperature Sensor.....	3-25			